



**CYCLE COUNTRY**  
A KOLPIN POWERSPORTS BRAND

**Work**  
**POWER**  
**2000**

# ATV BLADE HARDWARE

**For HONDA ATVs**

*Owner's Manual*

**MODEL NUMBER: 15-1570**

**CUSTOMER MUST RECEIVE A COPY OF THIS  
OWNERS MANUAL AT TIME OF SALE**

**THANK YOU FOR YOUR PURCHASE OF OUR**

**Work  
POWER  
2000**

**SNOW PLOW**


**ENCLOSED IN THIS KIT IS THE**

**ATTACHING HARDWARE KIT**

**TO HAVE A COMPLETE PLOW ASSEMBLY, YOU MUST HAVE AT LEAST FOUR BOXES:**

- 1. MODEL SPECIFIC ATTACHING HARDWARE KIT: TO ATTACH THE UNIVERSAL PUSH TUBE TO ATV.**
- 2. UNIVERSAL PUSH TUBE**
- 3. BLADE OF YOUR CHOICE (COLOR, STYLE, & SIZE)**
- 4. YOUR CHOICE OF BLADE LIFT METHODS,**
  - a. UNIVERSAL MANUAL LIFT**
  - b. ELECTRIC BLADE LIFT**
  - c. USE YOUR WINCH TO RAISE AND LOWER YOUR BLADE.**

**FOR SERVICE OR TECHNICAL SUPPORT CALL 1-800-841-2222**

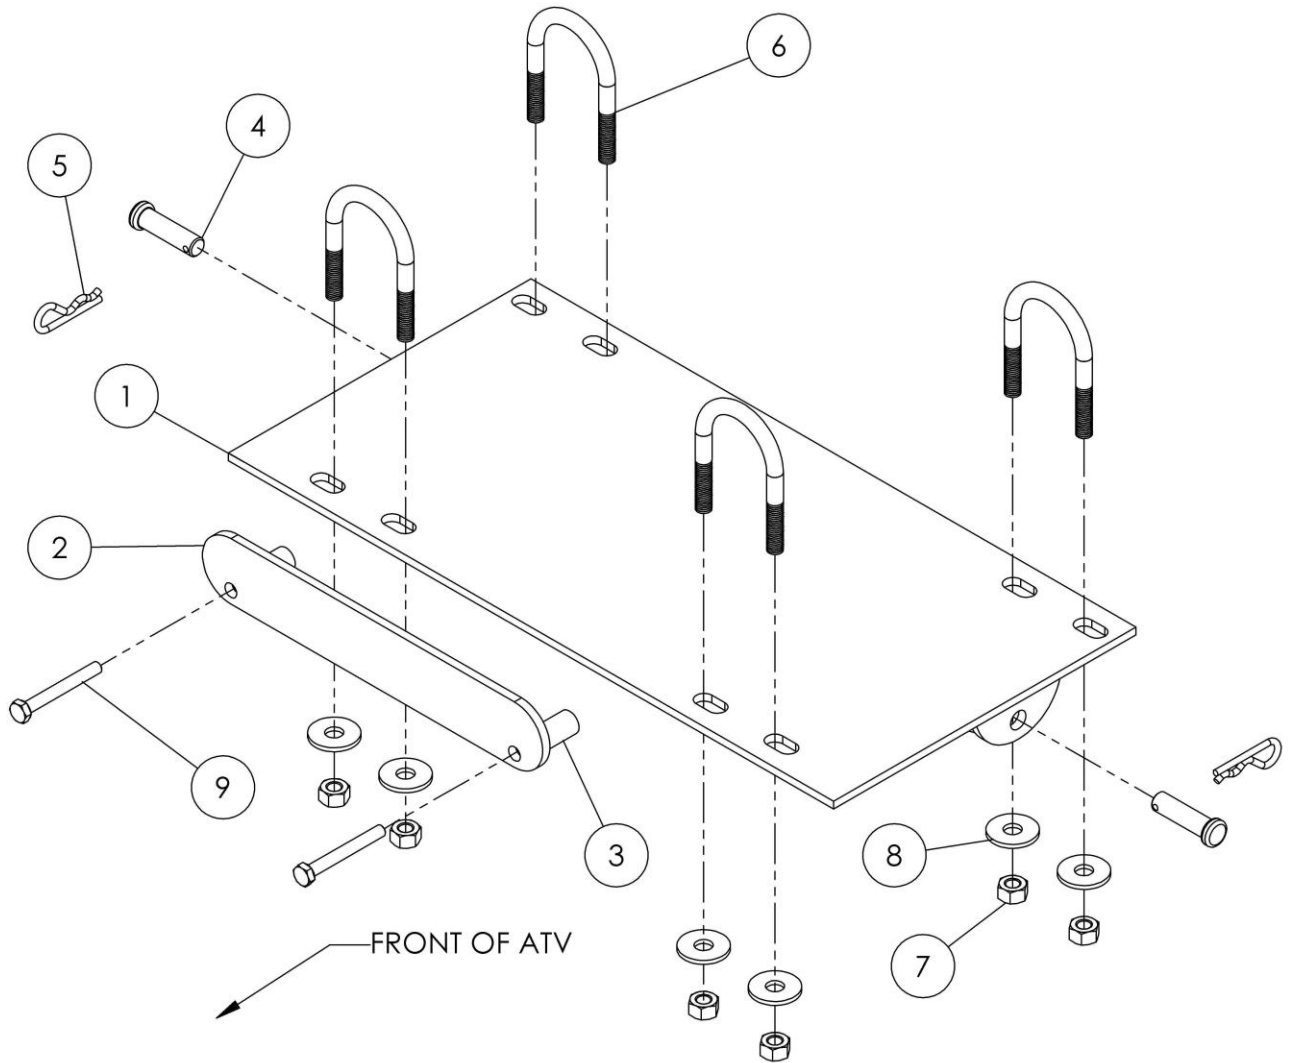

## Model Number 15-1570 Parts List

ITEM NO.	QTY.	PART NO.	DESCRIPTION
1	1	CYC4273	Blade Mount
2	1	CYC4423	Strap Guard
3	2	PUR1848	Mount Bracket Spacer
4	2	PUR1209	Clevis Pin-10mm x 35mm
5	2	PUR1249	#3 Hair Pin
6	4	PUR3192	U-Bolt 8mm x 40mm x 65mm
7	8	PUR3068	Nylon Lock Nut M8
8	8	PUR3087	Flat Washer 8mm
9	2	PUR3008	Metric Bolt 6 x 50mm

## Hardware Package CYC5767


**WARNING**

- Due to reduced ground clearance remove plow Mount Brackets before trail riding.
- Do not exceed 5 MPH with the blade or its brackets installed
- ◆ Periodically check for wear and tightness of all bolts, nuts and fasteners. Replace or tighten as necessary



**All directions referring to the right and the left are when the operator is sitting on the ATV.**

**Model Number 15-1570  
Attaching Bracket Installation Instructions**


**Note: Skid plate may need to be notched to allow correct bolt alignment. See picture below.**

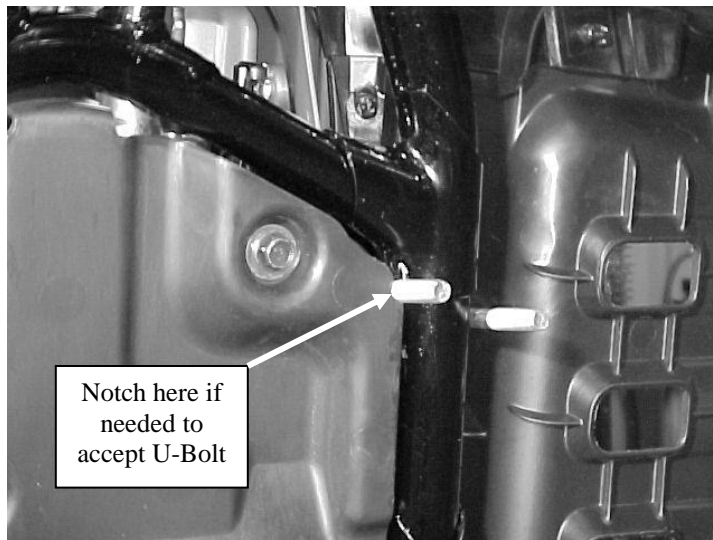

1. Position the U-bolts according to pictures below.

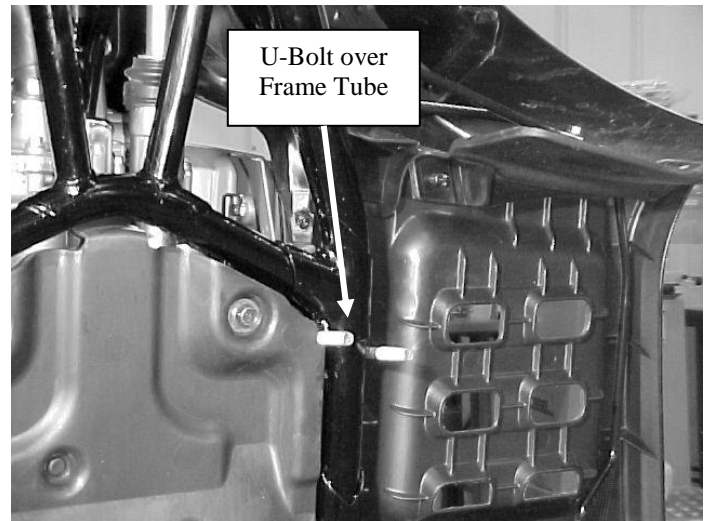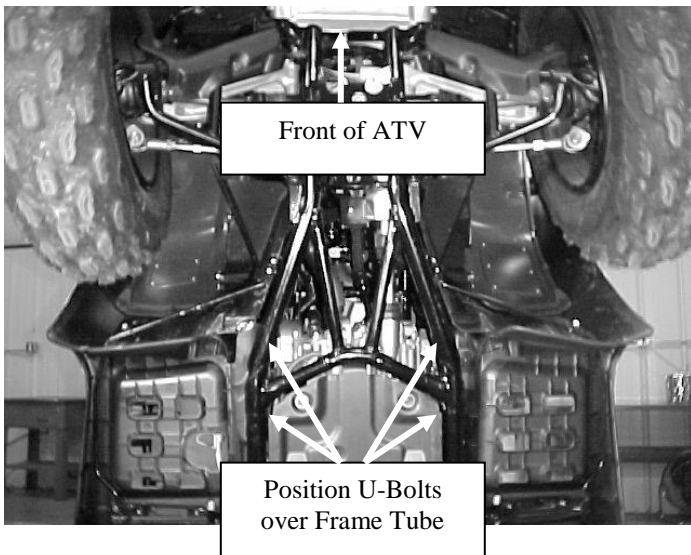

2. Attach the blade mount to the bottom side of the foot pegs using U-bolts, washers and nuts. (See picture below.) **NOTE:** See parts diagram for correct washer placement.

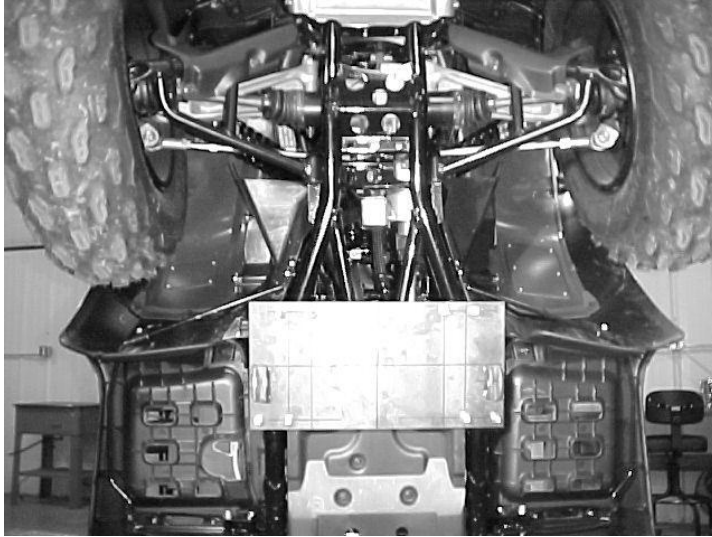

### Strap Guard Installation

1. Remove the existing metric bolts that are located on the front side of the bumper.
2. Using the 6 x 50 metric bolts provided, attach the strap guard and the two spacers in place of the existing metric bolts that were removed in the previous step. *See picture below.*





## Limited Lifetime Blade Assembly Warranty

For the lifetime of the blade assembly from the purchase date, Cycle Country (a Kolpin Powersports brand) will replace for the original purchaser, free of charge, any part or parts when found upon examination by Cycle Country to be defective in material, workmanship, or both. All transportation costs incurred submitting product to Kolpin for Cycle Country brand products for warranty consideration must be borne by the purchaser. If Cycle Country determines that the product must be returned to the factory for credit, please call 1-800-841-2222 for a Return Merchandise Authorization (RMA) number and shipping instructions.

This warranty does not apply to parts that have been damaged by accident, alteration, abuse, improper lubrication, normal wear, or other causes beyond the manufacturer's control. Peripheral products such as engines, electric motors, and actuators may carry an original manufacturer's warranty. Please call Cycle Country for more information.

CYCLE COUNTRY  
A KOLPIN POWERSPORTS BRAND  
205 N DEPOT ST  
FOX LAKE, WI 53933  
SERVICE: 800-841-2222  
FAX: 800.245.7569  
E-MAIL: [ccac@cyclecountry.com](mailto:ccac@cyclecountry.com)  
WEB: [www.cyclecountry.com](http://www.cyclecountry.com)

© 2011 Cycle Country Accessories Corporation