



# MID-MOUNT KIT

FOR HONDA ATV's


P/N 15-1630

## ASSEMBLY / OWNERS MANUAL

Application

PLOW PUSH FRAME NO. 15-0070, 33-0000 or 33-0070

Before you begin, please read these instructions and check to be sure all parts and tools are accounted for. The following instructions contain details required to install and service the contents of this kit.

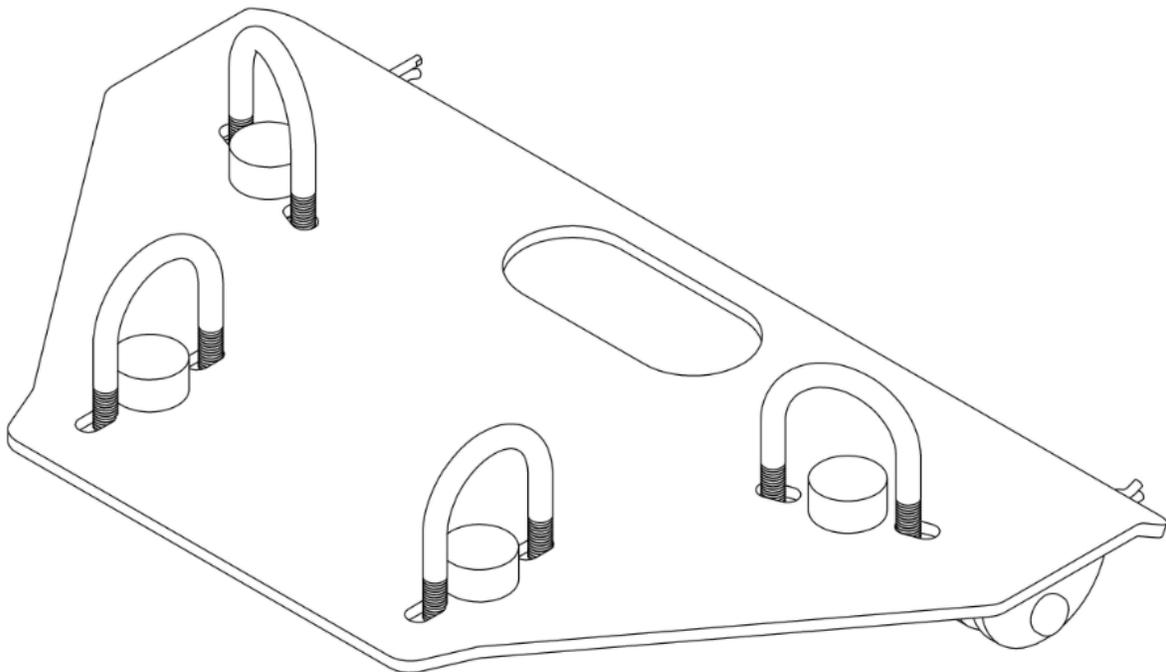

## OPERATING INSTRUCTIONS

Congratulations! You've just purchased the most durable plow component in the industry. Kolpin plow components work great for summer or winter plowing. With proper care and maintenance, your Kolpin plow system will last for years to come!

### NOTICE

**Plow operation requires additional components for operation: *Kolpin Plow Blade, Kolpin Plow Push Frame, High Rise Plow Push Frame, Winch Kit\* and/or manual lift***

*\*These components may be specific to your vehicle.*

Please read and understand all assembly instructions, notices and warnings before assembling and operating your Kolpin plow system.

#### Follow these guidelines to ensure satisfactory operation:

- Read this manual and your ATV/ UTV operators manual before use.
- Periodically check for wear and tightness of all fasteners. Replace or re-torque fasteners as necessary.
- Before first use, set plow in the furthest right or left angled position to check for interference with the vehicle.
- Operate with extreme caution on slopes and rough terrain. Be familiar with the area before you plow.
- Be aware of immovable objects that could be hidden in the area you are plowing.
- To avoid damage when pushing snow into a pile, reverse direction before raising the plow blade.
- Do not ram the plow blade into piles of snow.
- For best results, set the suspension preload of your ATV/ UTV to the stiffest setting.
- To reduce steering effort and increase mobility, set the air pressure of your tires to the maximum pressure specification.
- The plow skids are adjustable. General skid setting is even with the plow wear bar bottom edge, higher settings reduce the chance of rocks and gravel from being collected.
- To increase traction during plow operation, operators can try: Securing weight to the ATV/ UTV for additional tire downforce, reducing tire air pressure, or installing tire chains.

## SAFETY INFORMATION

Our plow systems were designed with your safety in mind. Please read and understand all Cautions, Notices and Warnings in this manual before you begin. In order to protect you and your ATV/UTV, certain parts of the plow system and/or hardware are designed to fail when the equipment is over-stressed.



# DANGER




#### TO AVOID SERIOUS INJURY OR DEATH:

1. **DO NOT EXCEED 5 MPH (8 KMH) WITH BLADE INSTALLED.**
2. **OPERATE WITH EXTREME CAUTION ON SLOPES, STEEP GRADES, AND ROUGH TERRAIN.**
3. **ALLOW NO RIDERS ON BLADE OR ATV/UTV WHILE MOVING OR STATIONARY.**
4. **KEEP BYSTANDERS AWAY FROM THE BLADE OR ATV/UTV WHILE MOVING OR STATIONARY.**
5. **WHEN PUSHING HEAVY MATERIAL, DIRECTION CONTROL MAY BECOME DIFFICULT.**
6. **BEFORE ADJUSTING BLADE: STOP ATV/UTV ENGINE; SET AND LOCK BRAKES; RAISE AND LOCK BLADE IN UP POSITION. DO NOT ATTEMPT TO RAISE BLADE BY HAND; USE THE LIFT MECHANISM ONLY.**
7. **LOWER BLADE TO DOWN POSITION WHEN BLADE AND ATV/UTV ARE NOT IN USE.**
8. **READ BLADE'S INSTRUCTION SHEETS AND ATV/UTV OWNER MANUAL.**

## Kit Contents:

Item	Qty	Part Description	Part Number
1	1	Blade Mount Weldment	CYC6499
2	4	U-Bolt, Zinc Plated, M8-1.25 x 40mm x 65mm	PUR3192
3	8	Flange Locknut, Zinc Plated, M8-1.25	PUR3074
4	2	Hair Pin, Zinc Plated, #3	PUR1249
5	2	Clevis Pin, Zinc Plated, 10mm x 35mm	PUR1209
6	1	Instruction Guide (not shown)	-

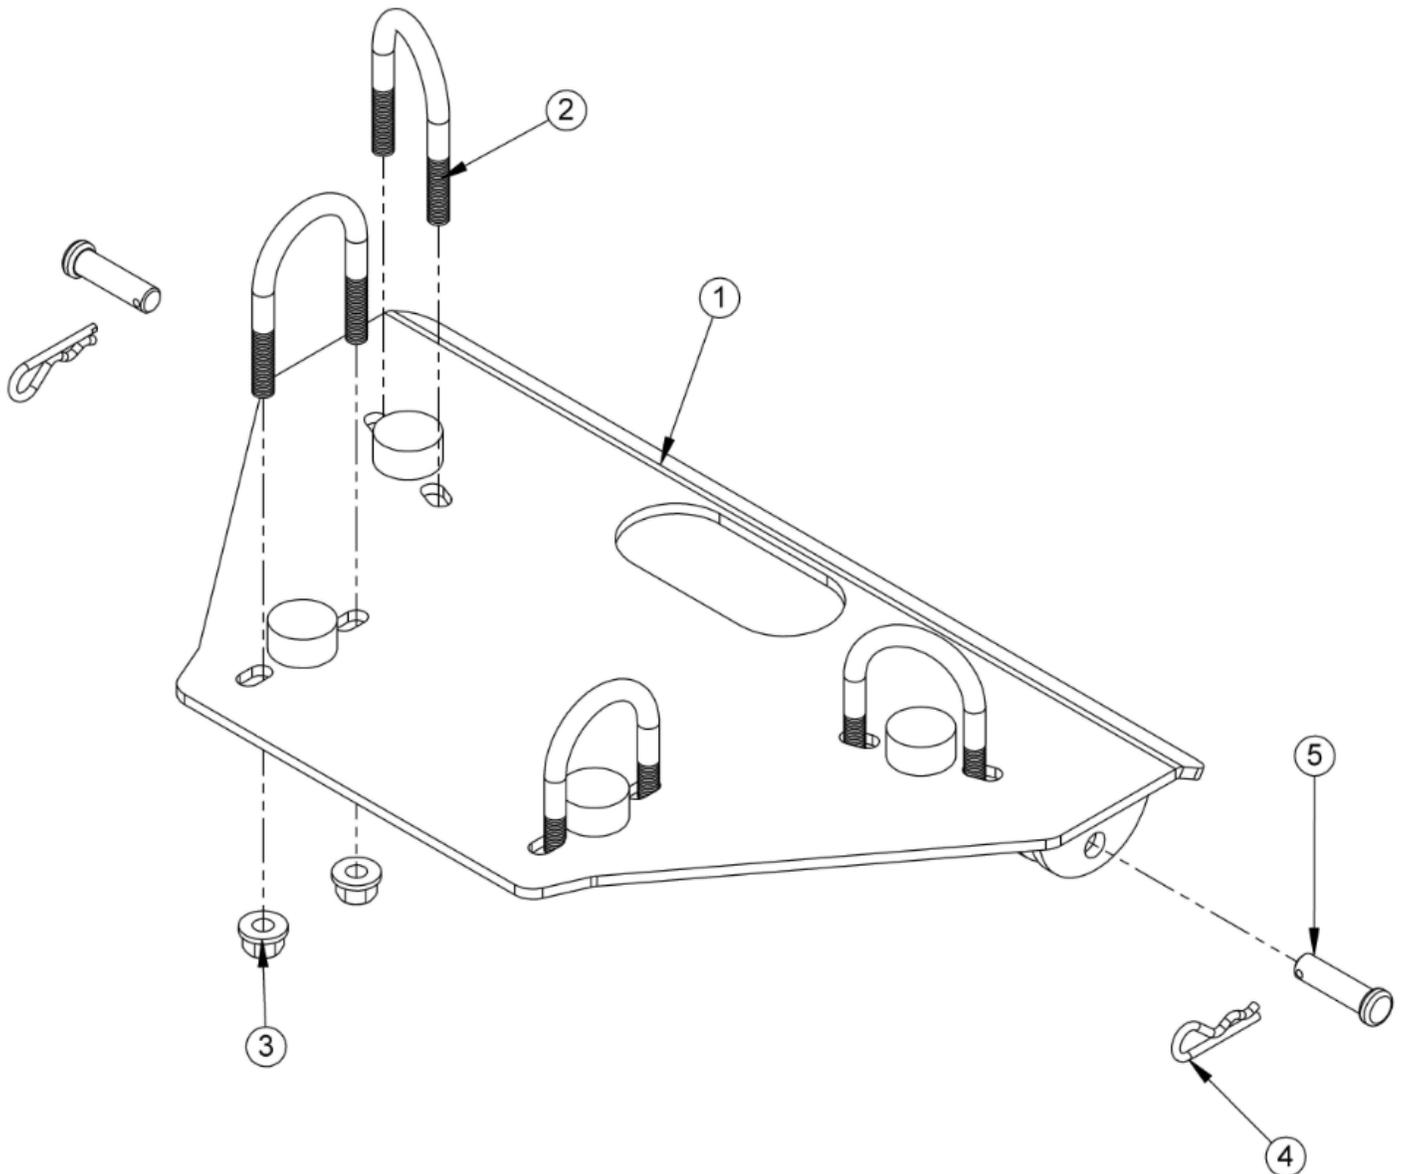

## BEFORE YOU BEGIN:

- Your Kolpin accessory is exclusively designed for your vehicle
- Please read and understand all instructions
- Verify all parts and tools are accounted for
- To ensure a satisfactory installation, follow all steps correctly and in the sequence described
- Keep these instructions for future reference or for informational requests
- To facilitate installation, make sure that your vehicle is clean and free of debris
- All directions referring to right and left are when the rider is sitting on the machine
- The plastic skid plate will need to be modified to be reinstalled on the vehicle

## TOOLS REQUIRED:

- Basic Metric Hand Wrench and Socket Set
- Torque Wrench
- Drill or cutting tools for plastic
- Do Not use impact tools to install hardware

## APPROXIMATE ASSEMBLY TIME: 30 minutes


Note: Removal and modification of the plastic skid plate is recommended.

Note: If any hardware is missing, do not return to the store. Call us to help, Toll Free 1-877-956-5746.


<b>SPARE KITS</b>		<b>Hardware kit P/N CYC6498</b>
<b>Item</b>	<b>Description</b>	
2	U-Bolt, Zinc Plated, M8-1.25 x 40mm x 65mm	4x
3	Flange Locknut, Zinc Plated, M8-1.25	8x
4	Hair Pin, Zinc Plated, #3	2x
5	Clevis Pin, Zinc Plated, 10mm x 35mm	2x

**Installation Prep:**

1. Remove the plastic skid plate from the vehicle.  
(See Illustration 1-1).


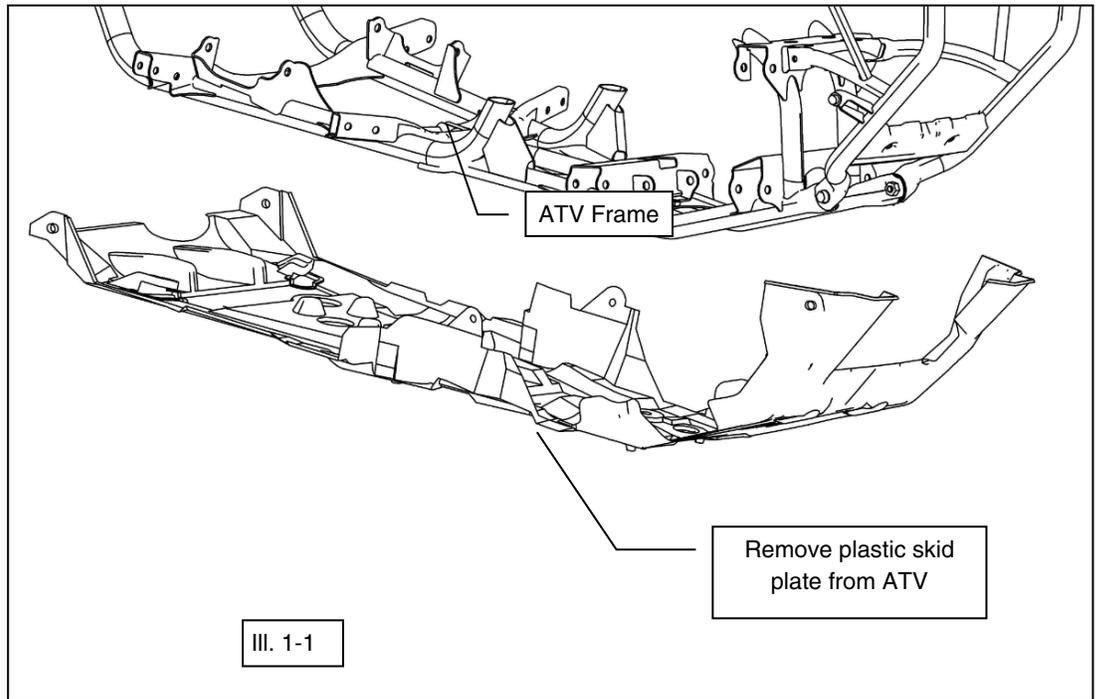


2. The plastic skid plate will need to be modified to be re-installed on the vehicle.
3. Place the skid plate upside down on a large work bench or the floor.
4. Use the mount plate, item #1, as a template to mark and/or drill the eight locations needed for the attaching hardware.
5. Do this by positioning the front spacers of the mount plate on to the two recessed mount locations in the middle of the skid plate. (See Illustration 1-2).

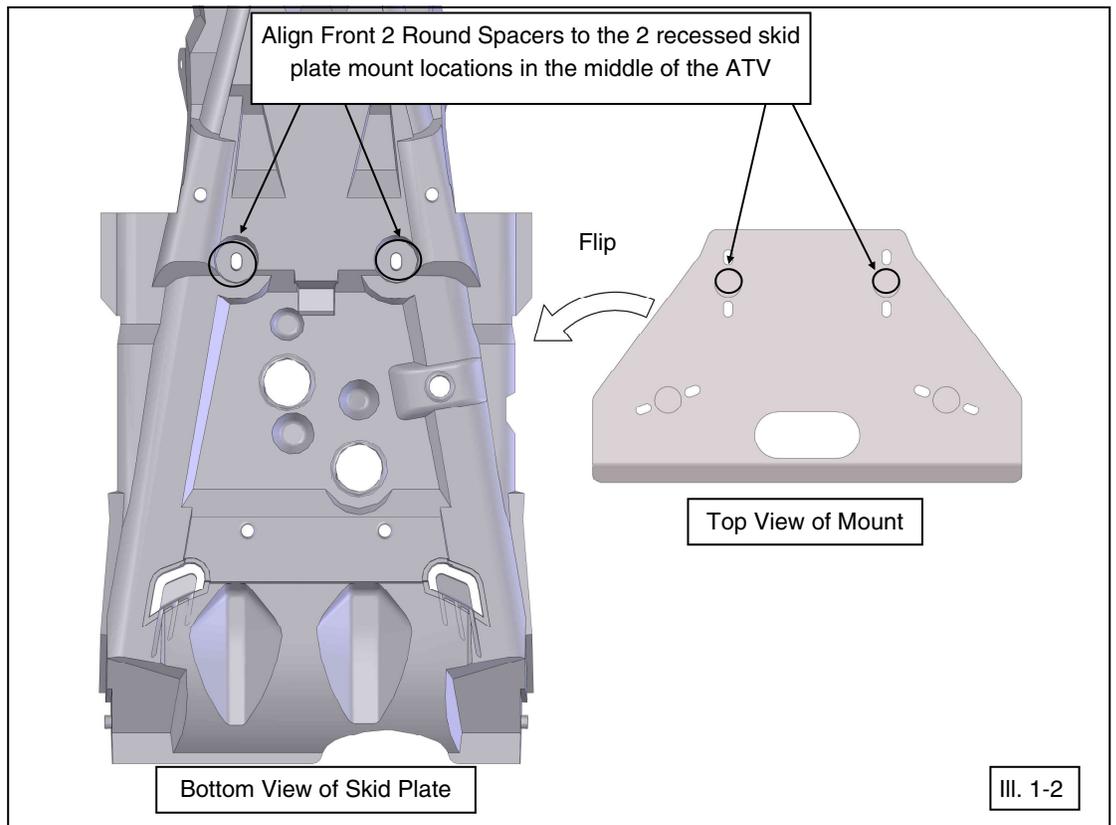

**Installation Prep (continued):**

6. Mark the locations needed for the hardware on to the skid plate. (See Illustration 1-3).
7. Drill holes through the skid plate at locations marked. (See Illustration 1-4).
8. Use a 3/8" to 1/2" bit to create an oversized hole that will allow some relief when installing hardware. **Note, a high speed cutting tool (like a Dremel) with a cutting bit will also work.**

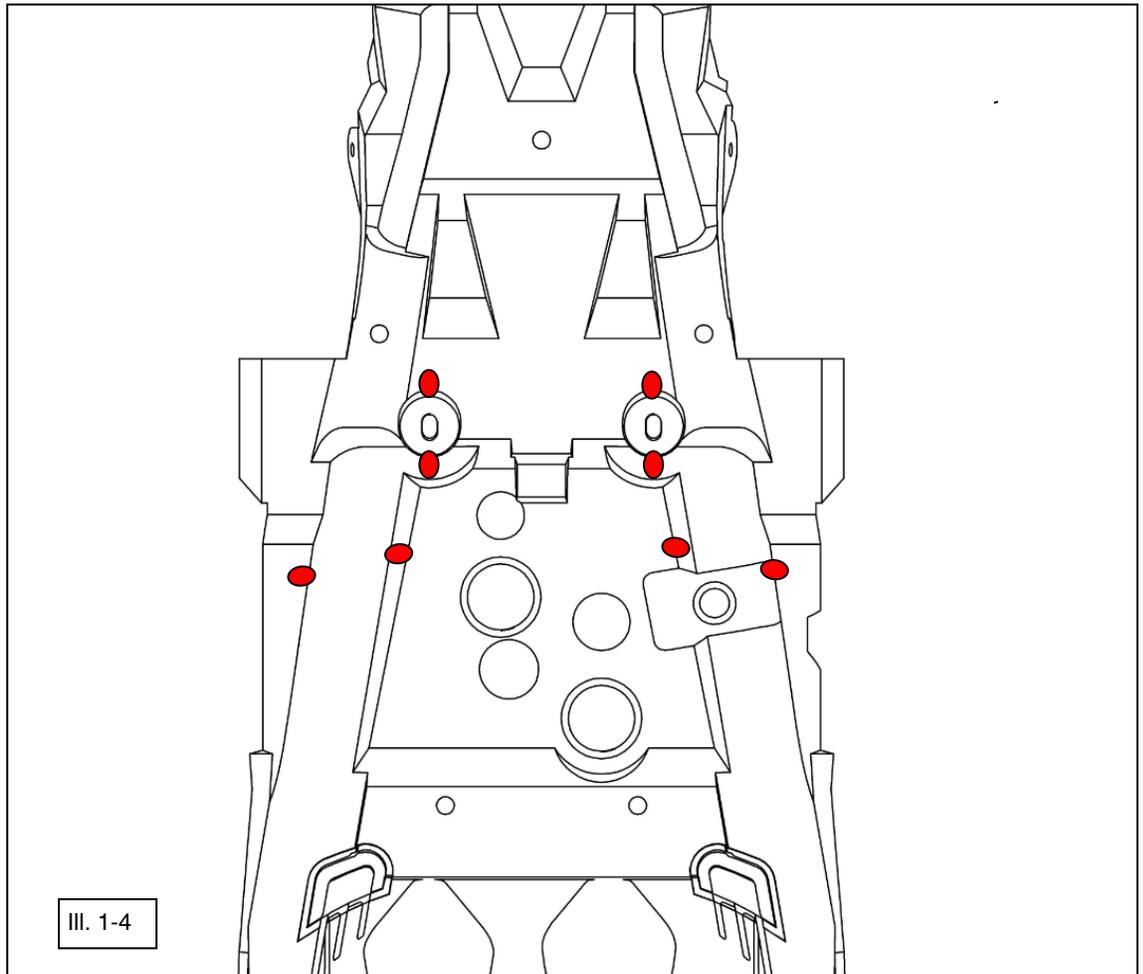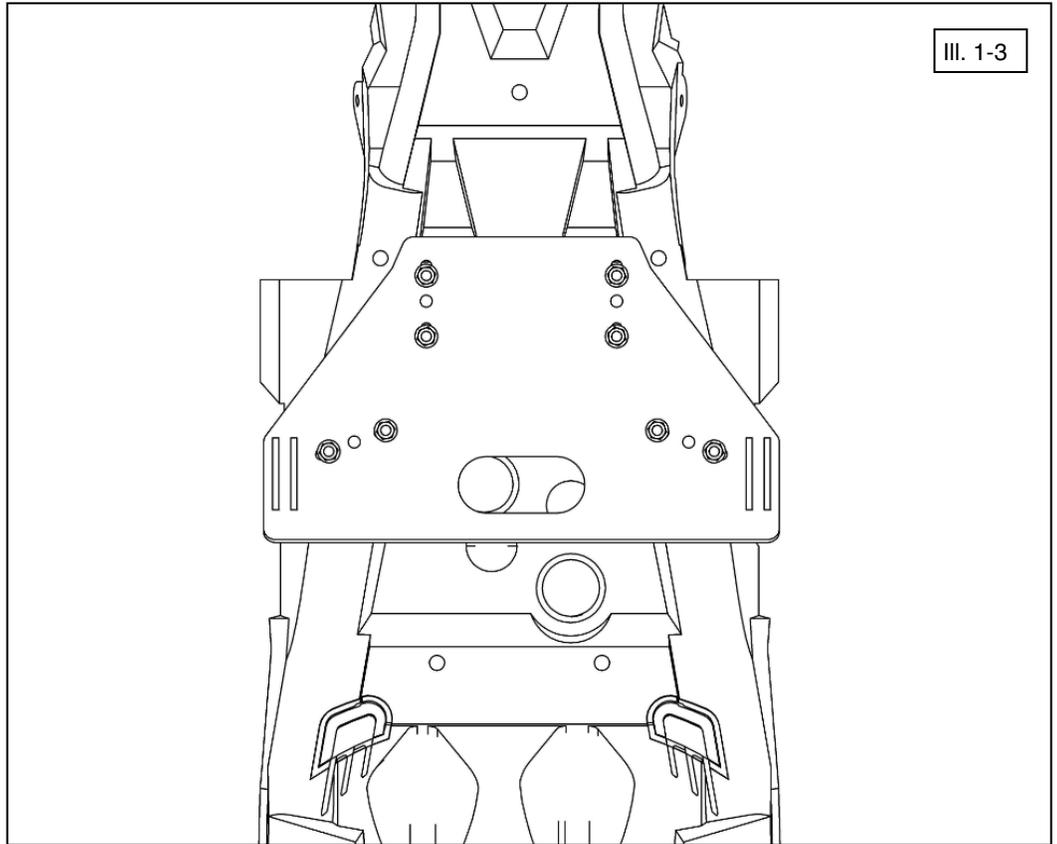


**Mount Plate Installation:**

1. Partially re-install the plastic skid plate. Note, the skid plate is inserted sliding from the rear forward. Insert the skid plate and install one of the forward most bolts to keep it in place. DO NOT re-install the 2 bolts in the middle near the locations drilled for mount hardware. These will no longer be needed and could interfere with mount.

Place the front u-bolts over the cross member at the two locations used to mount the skid plate. Tape can be used to temporarily hold the bolts in place.

Position both rear u-bolts over the frame tubes between these two gussets. Tape can be used to temporarily hold the bolts in place.

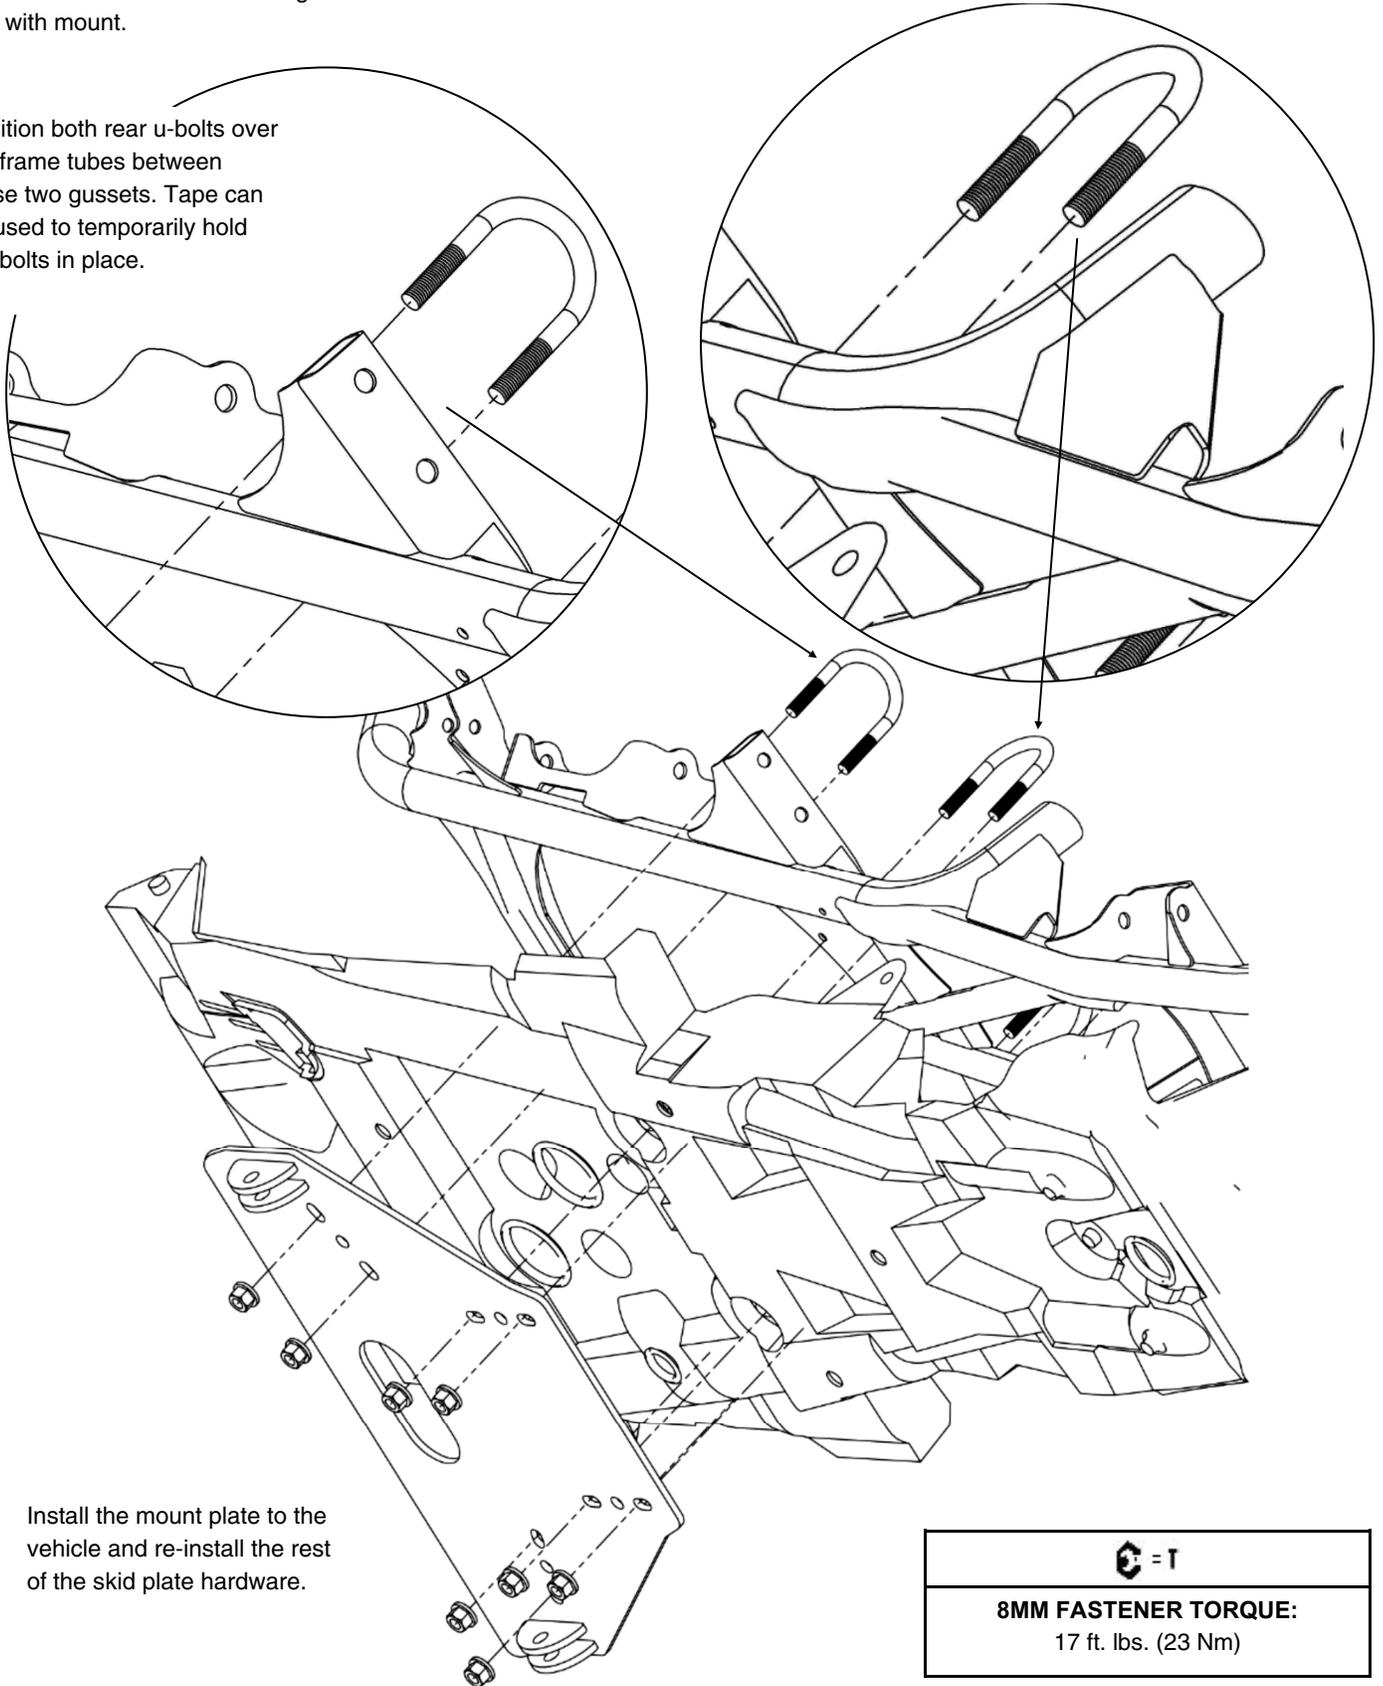

2. Install the mount plate to the vehicle and re-install the rest of the skid plate hardware.

 = T
<b>8MM FASTENER TORQUE:</b> 17 ft. lbs. (23 Nm)



## **One Year Limited Warranty**

For the period of one (1) year from the purchase date, Kolpin will replace for the original purchaser, free of charge, any part or parts found upon examination by Kolpin to be defective in material, workmanship, or both.

All transportation costs incurred submitting product to Kolpin for warranty consideration must be borne by the purchaser. If Kolpin determines that the product must be returned to the factory for credit, please call 1-877-956-5746 for a Return Merchandise Authorization (RMA) number and shipping instructions.

This warranty does not apply to parts that have been damaged by accident, alteration, abuse, improper maintenance, normal wear, or other causes beyond the manufacturer's control. In order to protect you and your ATV, certain parts of the plow system and/or hardware are designed to fail when the equipment is over-stressed. Parts that are lost due to loosening and improper maintenance are not covered under warranty. This warranty does not cover removal or reinstallation labor fees of the plow system and related components.

Peripheral products such as engines, electric motors, and actuators may carry an original manufacturer's warranty. Most hardware is general in nature and is easily obtained locally. Be sure to replace with minimum metric class 8.8 specification.

**Kolpin Outdoors, Inc.**

**Telephone: (763)-478-5800**

**Toll Free: (877)-956-5746**

**Fax Number: (800)-245-7569**

**[www.kolpin.com](http://www.kolpin.com)**

**Email: [customerservice@kolpin.com](mailto:customerservice@kolpin.com)**